

ASSEMBLY INSTRUCTIONS

Double Deep 38 1/4" Modular Racking

Thank you and CONGRATULATIONS for purchasing this fine quality product. Properly assembled and installed, your racking will enhance your wine collection for many years to come. To assemble your racks, please check to ensure all necessary parts have been included and follow the assembly instructions closely. If you have any questions or problems, please call us at 1-845-658-7181, Monday through Friday 9am to 5pm EST




If you are planning to stain or finish your racking we recommend you do so BEFORE assembly for best results.




*Note: Instructions shown for a 6 column rack. Assembly procedure remains the same for all standard racking.

PARTS LIST


END LADDER ASSEMBLIES

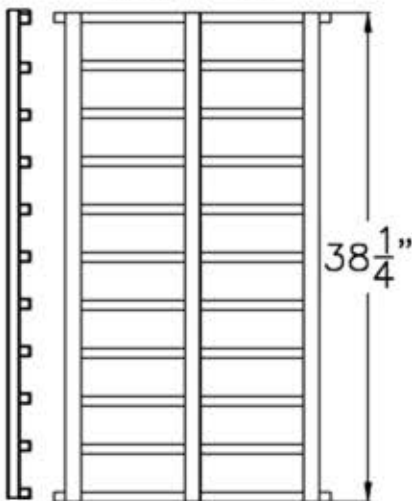

SPACER BAR ASSEMBLY
(Various Lengths)

 

MIDDLE LADDER ASSEMBLIES

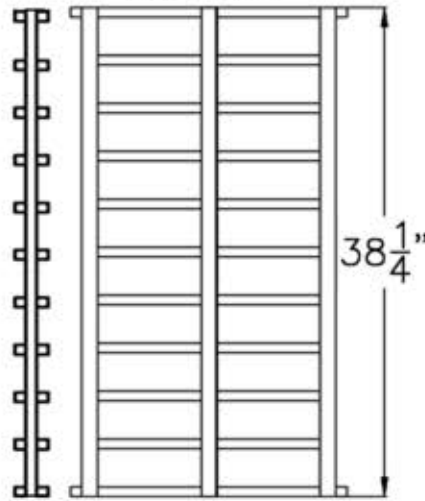

SPACER BAR SCREW ASSEMBLY
(Various Lengths)



All individual bottle racks are designed to be assembled with a nail gun, using either 18 gauge 1 1/2" brad nails or similar finishing nail. Nails are not included.

If you purchased pre-drilled screw assembly, 1 1/2" Phillips head screws will be supplied in your order.


PACKAGE CONTENTS

SKU	PRODUCT NAME	MIDDLE LADDERS	END LADDERS	SPACER BARS	SCREWS (if used)
8_3-000-0525-3825-DD	1 Column 38 1/4" Mod. Double Deep Individual Racking	0	2	4	8
8_3-000-0975-3825-DD	2 Column 38 1/4" Mod. Double Deep Individual Racking	1	2	4	12
8_3-000-1425-3825-DD	3 Column 38 1/4" Mod. Double Deep Individual Racking	2	2	4	16
8_3-000-1875-3825-DD	4 Column 38 1/4" Mod. Double Deep Individual Racking	3	2	4	20
8_3-000-2325-3825-DD	5 Column 38 1/4" Mod. Double Deep Individual Racking	4	2	4	24
8_3-000-2775-3825-DD	6 Column 38 1/4" Mod. Double Deep Individual Racking	5	2	4	28
8_3-000-3225-3825-DD	7 Column 38 1/4" Mod. Double Deep Individual Racking	6	2	4	32
8_3-000-3675-3825-DD	8 Column 38 1/4" Mod. Double Deep Individual Racking	7	2	4	36
8_3-000-4125-3825-DD	9 Column 38 1/4" Mod. Double Deep Individual Racking	8	2	4	40
8_3-000-4575-3825-DD	10 Column 38 1/4" Mod. Double Deep Individual Racking	9	2	4	44
8_3-000-5025-3825-DD	11 Column 38 1/4" Mod. Double Deep Individual Racking	10	2	4	48
8_3-000-5475-3825-DD	12 Column 38 1/4" Mod. Double Deep Individual Racking	11	2	4	52
8_3-000-5925-3825-DD	13 Column 38 1/4" Mod. Double Deep Individual Racking	12	2	4	56
8_3-000-6375-3825-DD	14 Column 38 1/4" Mod. Double Deep Individual Racking	13	2	4	60
8_3-000-6825-3825-DD	15 Column 38 1/4" Mod. Double Deep Individual Racking	14	2	4	64
8_3-000-7275-3825-DD	16 Column 38 1/4" Mod. Double Deep Individual Racking	15	2	4	68
8_3-000-7725-3825-DD	17 Column 38 1/4" Mod. Double Deep Individual Racking	16	2	4	72

***Note:** Please verify that you have the correct number of parts before proceeding.

PLEASE FOLLOW WRITTEN INSTRUCTIONS CAREFULLY

1. Find an open, flat area in which to assemble your racking. Carefully remove all components from the box and check all parts to verify package contents.
2. Arrange the end ladders on the floor so that the bottle support pieces face one another. Attach spacer bar to top, and bottom.

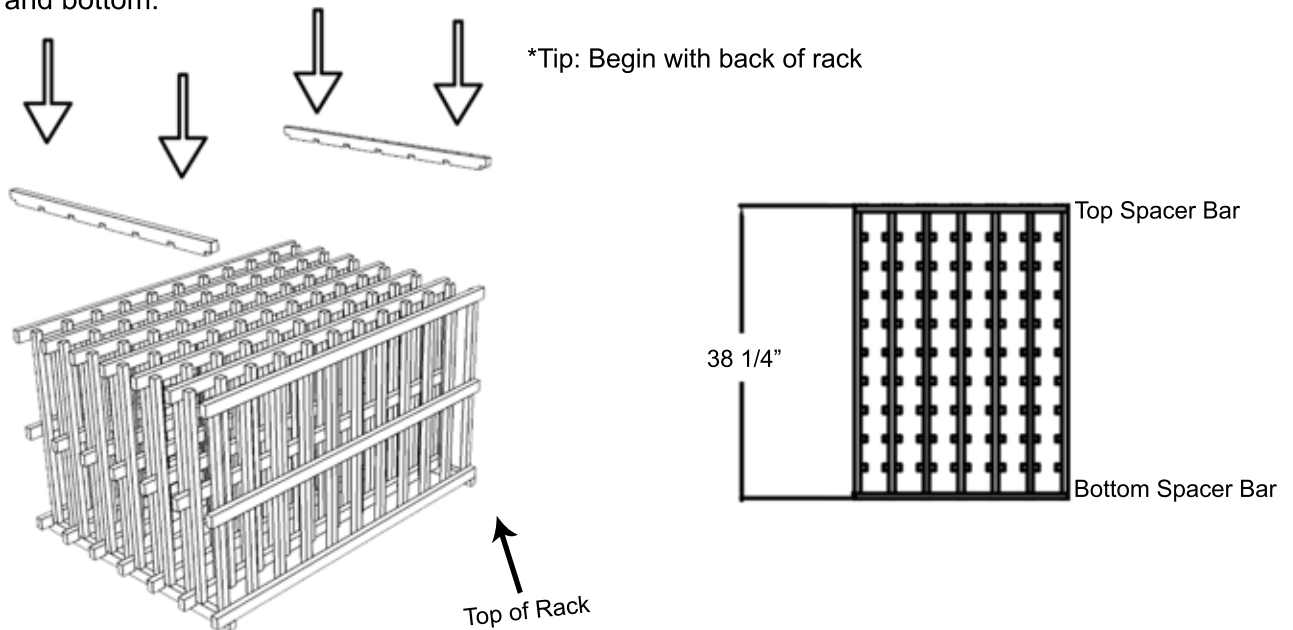

3. Attach middle ladders if applicable.
4. Flip and repeat for reverse side.

***Note:** For more stability attach racks to wall.