




MINIMALIST SERIES INSTALLATION INSTRUCTIONS

IMPORTANT! PLEASE NOTE THE FOLLOWING:


Check the package for missing or damaged items. When securing the post, use the correct mounting fasteners. There are 4 fastener locations on the top and bottom of the post. Contact Customer Service at 1-800-611-8644 for questions or concerns.

PACKAGE CONTENTS

Quantities will vary depending on the type of Minimalist Series wine rack.



2 x Nut Driver




20-120 Sets x Wine PEGs



1 x Telescopic Post




1 x Mounting Jig



20-40 Sets x Mounting Plates



40-240 x Flange Nuts




40-80 x 1/4" Self-Tapping Screws



1 x Wall Mount Extension Bracket
(Optional Add-On)



1 x Wall Mount Extension Bracket Insert
(Optional Add-On)



1 x Angled Mount Bracket
(Optional Add-On)

RECOMMENDED INSTALLATION TOOLS (NOT INCLUDED)



Standard Power Drill



Stud Finder



5/32" Drill Bit




Pencil



Level




Tape Measure

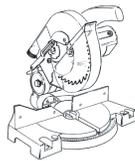


Non-Abrasive Saw
(Angled/Wall Mount)



Plumb Bob
(Angled Mount)



Speed Square
(Angled Mount)

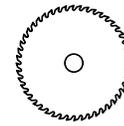

Metal Cutting Blade
(Angled/Wall Mount)



Metal File
(Angled/Wall Mount)

RECOMMENDED FASTENER APPLICATIONS:

Drywall anchors - Use for drywall when studs aren't available. Do not use on wall studs.

Wood Screws - Use to secure studs; do not use on drywall without a stud.

Concrete, Brick or Stucco - 3/16" x 1 1/4" Masonry Screw or #8 x 1 1/4" screw with the appropriate anchors.

**SCAN THE QR CODE
TO WATCH OUR
MINIMALIST SERIES
INSTALLATION VIDEO**



INSTALLATION INSTRUCTIONS




STEP CHOOSE MOUNT TYPE. 01 (WALL, ANGLE, CEILING)

Wall-Mount Instructions: Proceed to Step 1.1.W (PAGE ?)
Angled-Mount Instructions: Proceed to Step 1.1.A (PAGE ?)
Ceiling-Mount Instructions: Proceed to Step 2 (CONTINUE)




STEP SELECT MOUNTING 03 HARDWARE.

Choose hardware appropriate for your surface type, such as drywall, stucco, concrete, or brick.

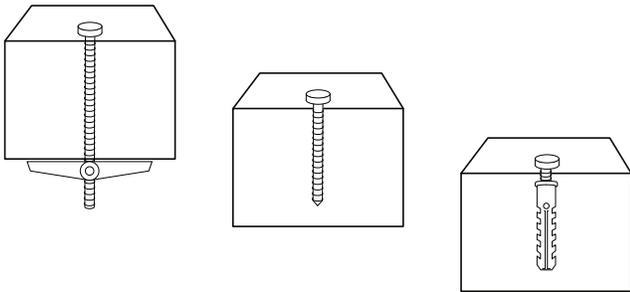


STEP ASSEMBLE TELESCOPIC 05 POST SYSTEM.

Take the 4ft insert, & slide it into the 7ft base. Then, prepare the post for installation in the desired location.
IMPORTANT NOTE: The wider base post must be mounted to the floor.

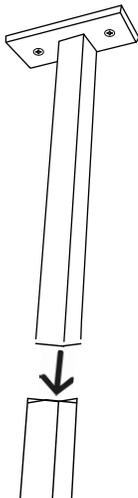


STEP MARK THE 02 INSTALLATION AREA.

Gather tools and determine where you want to mount the telescopic post. Once you've selected the location, measure and mark the mounting points on both the floor and ceiling.

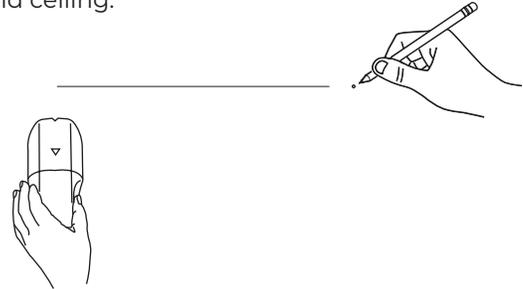

STEP DRILL MOUNTING 04 HOLES.


Using the appropriate tools and floor and ceiling mounting hardware, begin drilling holes at the marked spots on both the floor and ceiling to prepare for the post installation.

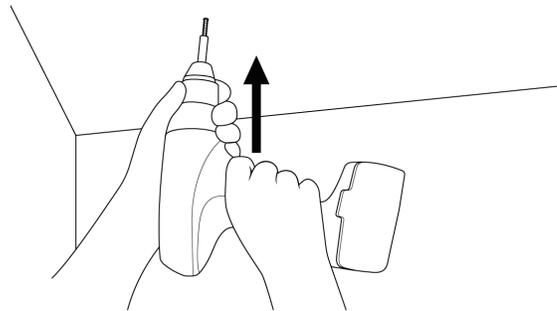

STEP ALIGN & SECURE 06 POST SYSTEM.

Align the post with a magnetic level and loosely secure it to the ceiling using the appropriate anchors. After securing the top, attach the hollow base to the floor with the correct anchors. Once the post is level, fully secure the post to both the floor and ceiling.

IMPORTANT NOTE: Once the post is secured to the floor and ceiling, apply the self-tapping screw into the mounting hole at the top of the base post.

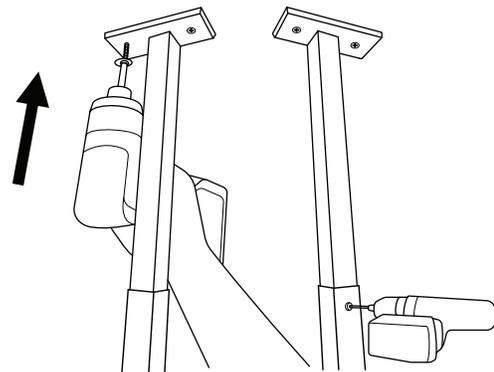


INSTALLATION INSTRUCTIONS

ULTRA™

STEP 07 DRILL INITIAL PILOT HOLES FOR THE FIRST MOUNTING PLATE

Beginning where you desire your first mounting plate to be placed (start from the bottom of the post), use the mounting jig to drill the initial set of 5/32" pilot holes.


PRO TIP: Utilize a center punch to mark the location of your pilot holes.

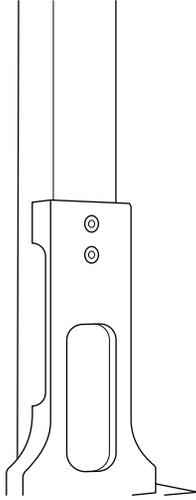

STEP 08 INSTALL FIRST MOUNTING PLATE.

Attach the first plate using the provided self-tapping screws, ensuring it is level and aligned.


IMPORTANT NOTE: Place the mounting jig on the installed plate to ensure consistent spacing and then repeat steps 7 & 8 to install the remaining mounting plates.

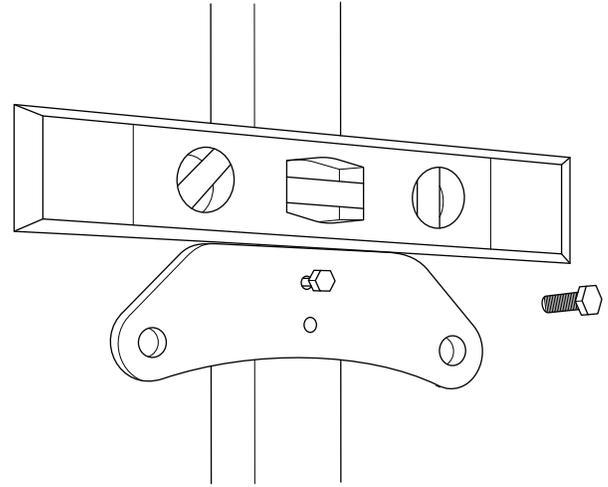

STEP 09 INSTALL WINE PEGS.


Insert pegs through each plate and hand-tighten flange nuts. Once in place, fully tighten using a wrench or provided sockets. Repeat as needed.

PRO TIP: Use gloves to get a firm grip on the rounded wine PEGs.

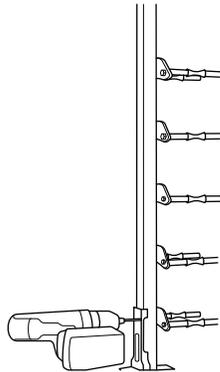

STEP 10 INSTALL BACK SIDE. (2-SIDED APPLICATION ONLY)



For 2-sided racks, repeat steps 7 through 9 on the opposite side of the post.

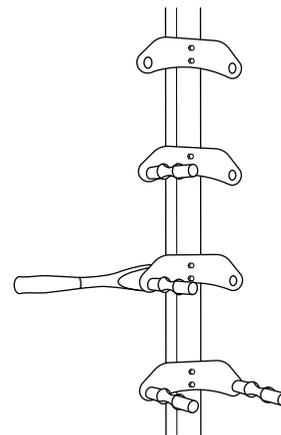

STEP 11 ADD WINE BOTTLES & ENJOY!



SCAN THE QR CODE TO WATCH OUR MINIMALIST SERIES INSTALLATION VIDEO

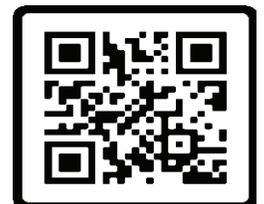

INSTALLATION INSTRUCTIONS (ANGLED MOUNT)




IMPORTANT NOTE: Verify you are using the correct size bracket, depending on whether you are attaching the bracket to the post's base or insert

STEP 1.1.A MEASURE ANGLE OF YOUR CEILING.

Use a speed square and plumb bob, digital angle finder, or protractor to measure ceiling slope.


IMPORTANT NOTE: For multiple rack installs, ensure you are getting the angle for each mounting location to account for any angle variations.

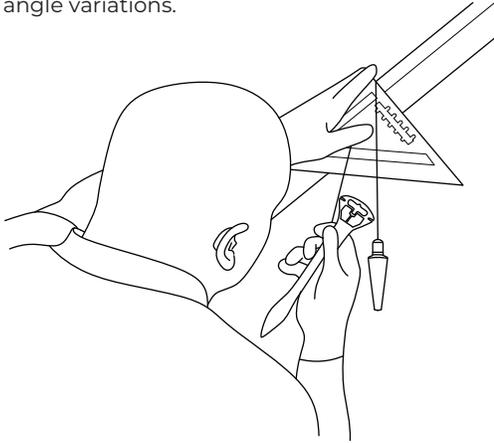

STEP 1.2.A CUT POST TO DESIRED ANGLE.

Mark the angle obtained from the prior step on the post's insert and use a reciprocating, band, miter, or hack saw with an appropriate metal cutting blade to cut the existing mounting bracket off.


IMPORTANT NOTE: An abrasive cut-off saw should not be used, as the heat generated is likely to damage the finish of the post.

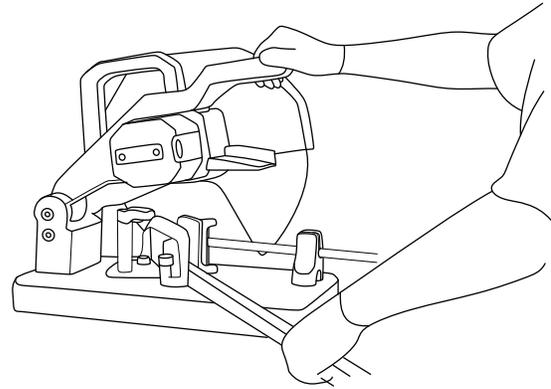

STEP 1.3.A REMOVE METAL BURRS FROM CUT.


After cutting the post, use a file to remove any sharp edges or burrs from the cut areas. Gently file down the rough spots to ensure a smooth, safe surface and prevent any potential damage to other components during installation.

PRO TIP: Use a fine-grit sandpaper (220 Grit) to remove any additional metal burrs created during the post-cutting process.

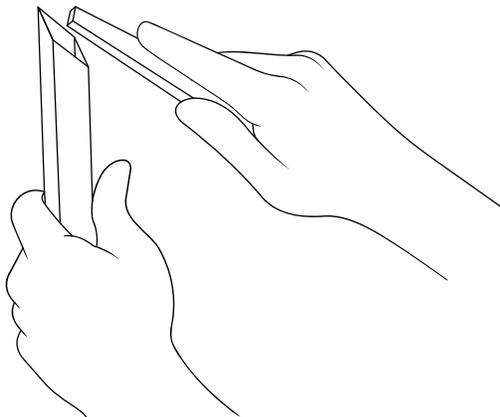

STEP 1.4.A SEAL THE CUT.

Paint the cut area to protect it from moisture. Allow the paint to dry completely before proceeding with the rest of the installation.

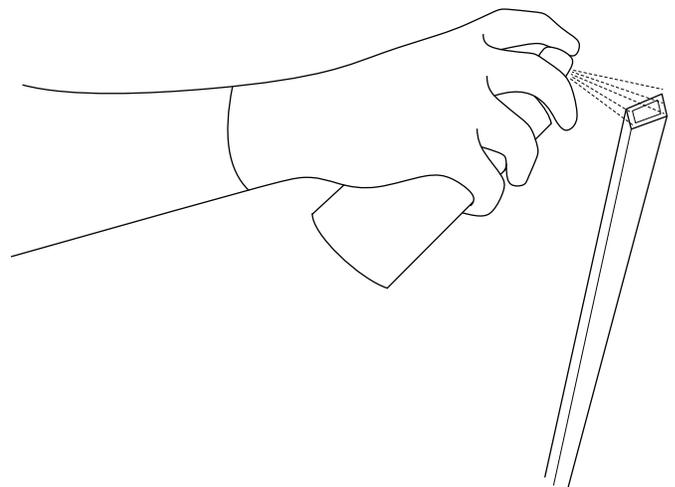

CONTINUE ONTO THE NEXT PAGE FOR ANGLED/WALL INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS (ANGLED MOUNT)




IMPORTANT NOTE: Verify you are using the correct size bracket, depending on whether you are attaching the bracket to the post's base or insert

STEP 1.5.A ALIGN & SECURE THE POST SYSTEM.

Align the post with a magnetic level and loosely secure it to the floor. Slide the angled mount onto the post, then raise the post insert until the mount touches the ceiling. Ensure the post is level, then secure the mount to the ceiling with the appropriate anchors.


PRO TIP: Wrap a piece of blue painters tape around the 4ft post insert near the location where the telescoping post and base post meet. This will prevent the insert from falling into the base post.

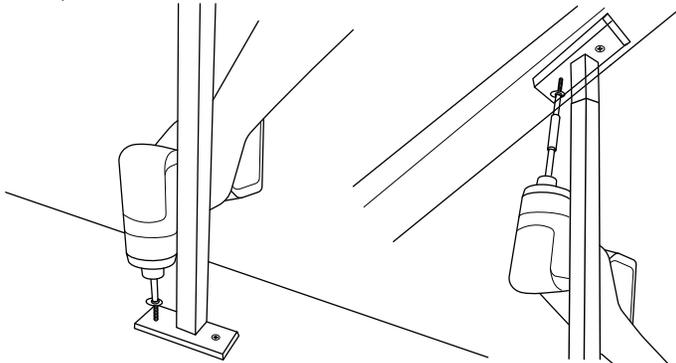

STEP 1.6.A SECURE THE ANGLED MOUNTING BRACKET.

Drill a pilot hole through the post and bracket. Secure with provided self-tapping screw.

PRO TIP: Before drilling a pilot hole, ensure that the pilot hole will go through both the post and the angle mount.

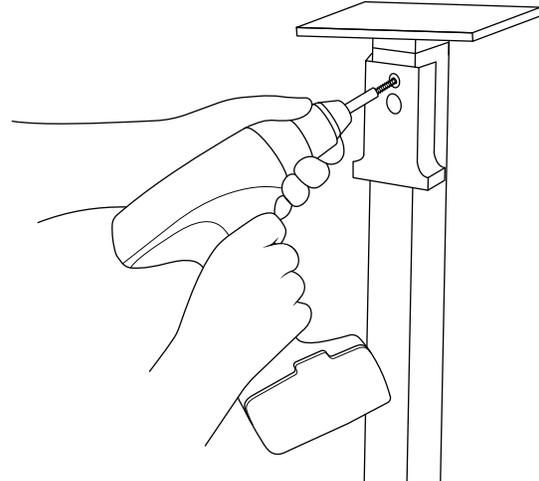

STEP 1.7.A PROCEED WITH RACK INSTALLATION.

Refer back to page 3, step 7, to complete the installation of your wine rack.



SCAN THE QR CODE TO WATCH OUR ANGLED MOUNT INSTALLATION VIDEO



CONTINUE ONTO THE NEXT PAGE FOR WALL MOUNT INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS (WALL MOUNT)




IMPORTANT NOTE: Verify you are using the correct size bracket, depending on whether you are attaching the bracket to the post's base or insert

STEP 1.1.w CUT OFF EXISTING BRACKET.

Using a reciprocating, band, miter, or hack saw with the appropriate metal cutting blade, squarely cut the top of the post's mounting bracket.


IMPORTANT NOTE: An abrasive cut-off saw should not be used, as the heat generated is likely to damage the finish of the post.

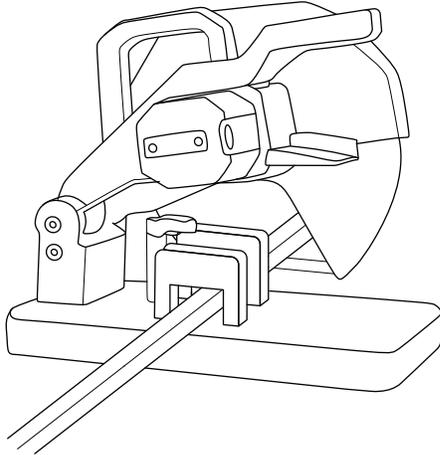

STEP 1.2.w REMOVE METAL BURRS FROM CUT.


After cutting the post, use a file to remove any sharp edges or burrs from the cut areas. Gently file down the rough spots to ensure a smooth, safe surface and prevent any potential damage to other components during installation.

PRO TIP: Use a fine-grit sandpaper (220 Grit) to remove any additional metal burs created during the post-cutting process.

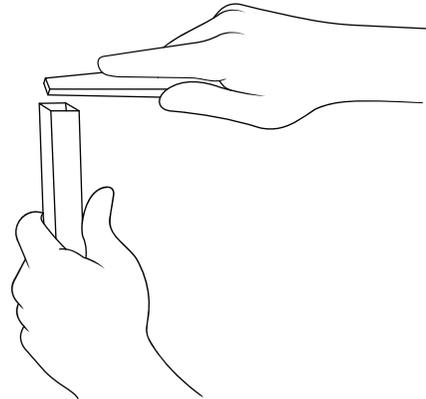


STEP 1.3.w SEAL THE CUT.

Paint the cut area to protect it from moisture. Allow the paint to dry completely before proceeding with the rest of the installation.

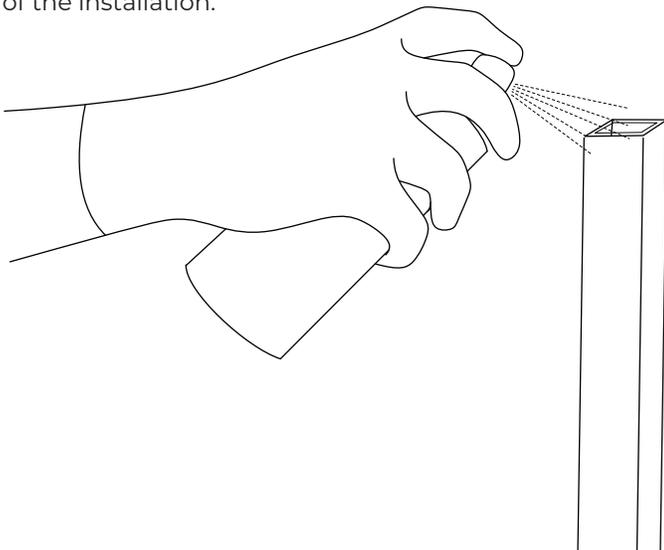

STEP 1.4.w INSTALL THE EXTENSION BRACKET TO POST.

Insert the Wall Mount Bracket extension into the post, drill a pilot hole through the post and extension bracket. Then secure the extension bracket with a self-tapping screw through the side of the frame.

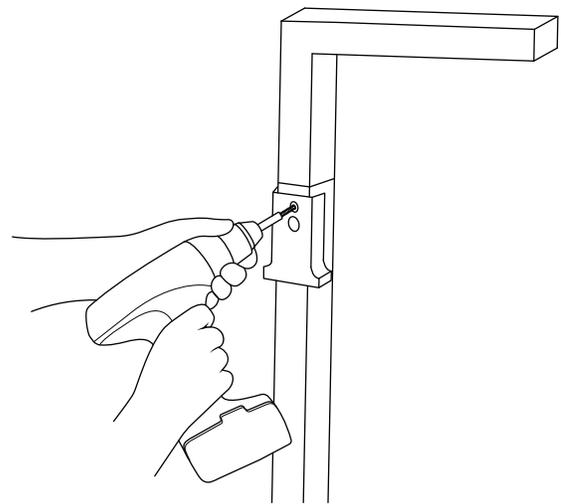

CONTINUE ONTO THE NEXT PAGE FOR WALL MOUNT INSTALLATION INSTRUCTIONS


INSTALLATION INSTRUCTIONS (WALL MOUNT)



IMPORTANT NOTE: Verify you are using the correct size bracket, depending on whether you are attaching the bracket to the post's base or insert


STEP 1.5.w INSTALL THE INSERT TO THE EXTENSION BRACKET.

Install the insert onto the extension bracket, drill a pilot hole through the insert and extension bracket. Then secure the insert with a self-tapping screw through the side of the extension.

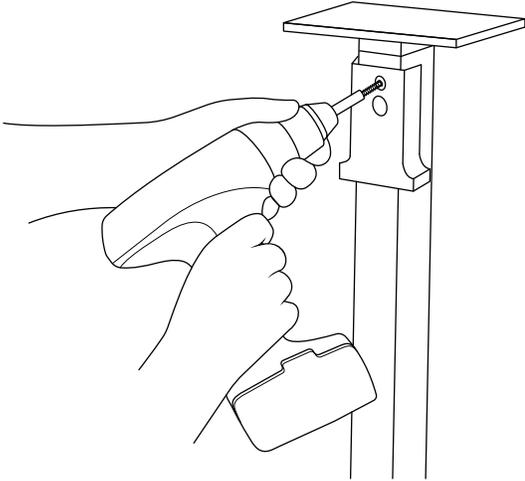

STEP 1.6.w ALIGN & SECURE POST SYSTEM.

Align the post with a magnetic level and loosely secure it to the wall using the appropriate anchors. After securing the top, attach the hollow base to the floor with the correct anchors. Once the post is level, fully secure the post to both the floor and wall.

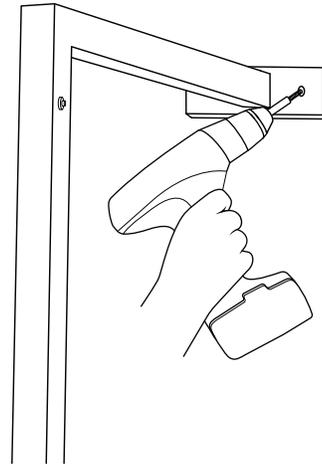

STEP 1.7.w PROCEED WITH RACK INSTALLATION.

Refer back to page 3, step 7, to complete the installation of your wine rack.



**SCAN THE QR CODE
TO WATCH OUR
WALL MOUNT
INSTALLATION VIDEO**

