


8_5-250-2775-3975

6 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS

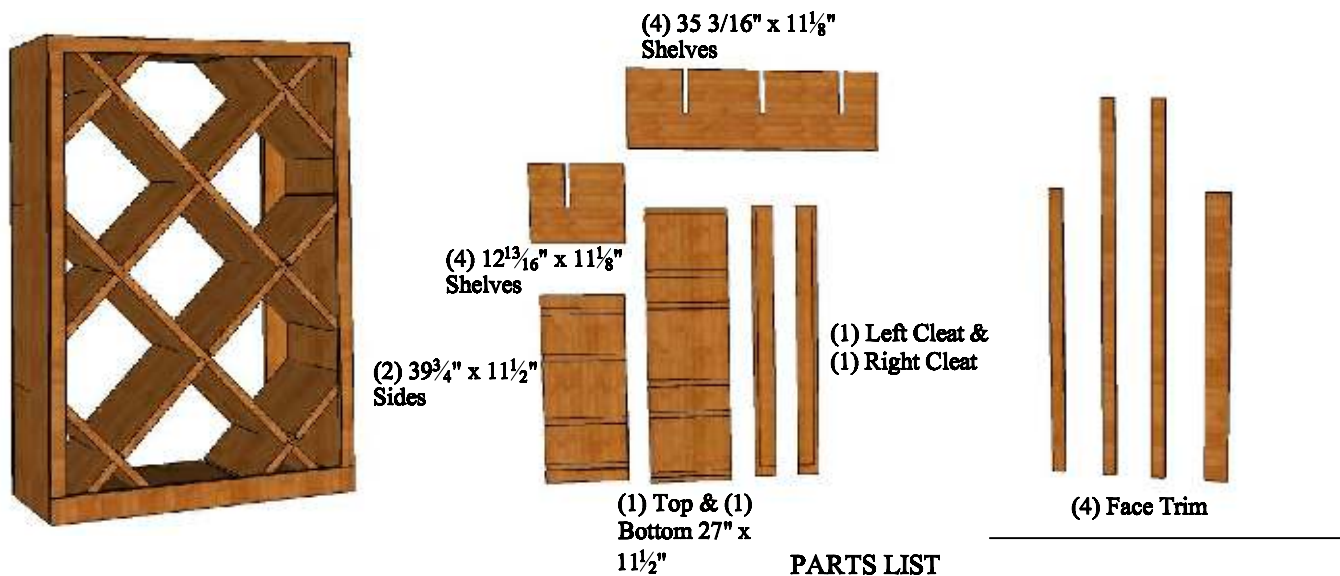


STEP 1.
ATTACH (2) SIDES TO THE TOP & BOTTOM
w/ SCREWS. ENSURE SLOTS ON SIDES
ALIGN.



STEP 2.
ATTACH (1) LEFT & (1) RIGHT CLEAT w/
SCREWS



STEP 3.
FLIP BIN OVER. SLIDE (2) SHORT SHELVES
& (2) LONG SLELF INTO SLOTS AS SHOWN.
ENSURE SHELF NOTCHES FACE UP AND
ALIGN.

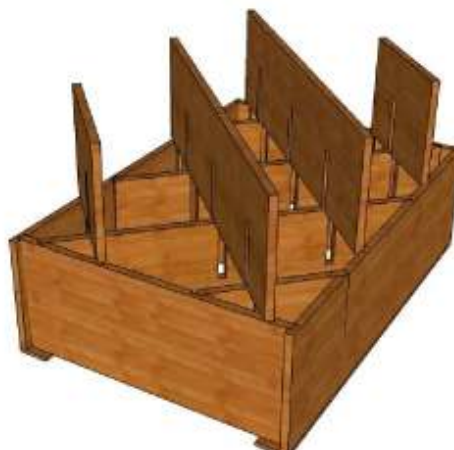

STEP 4.
SLIDE (2) SHORT SHELVES & (2) LONG
SLELF INTO SLOTS AS SHOWN. ENSURE
SHELF NOTCHES FACE DOWN.

8_5-250-2775-3975

6 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS



STEP 5.

**ATTACH (1) $2\frac{1}{4}$ " x $27\frac{3}{4}$ " FACE TRIM TO
BOTTOM OF BIN, (1) $1\frac{1}{4}$ " x $27\frac{3}{4}$ " FACE
TRIM TO TOP OF BIN AND (2) $1\frac{1}{4}$ " x $36\frac{1}{4}$ "
FACE TRIMS TO SIDES w/ FINISH NAILS.**