


8_5-250-3225-3975

7 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS



PARTS LIST

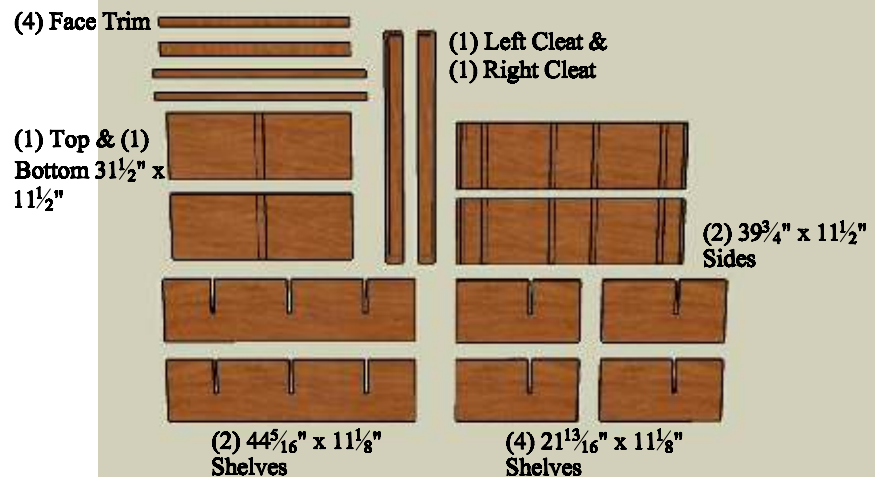


STEP 1.
ATTACH (2) SIDES TO THE TOP & BOTTOM w/ SCREWS. ENSURE SLOTS ON SIDES ALIGN.



STEP 2.
ATTACH (1) LEFT & (1) RIGHT CLEAT w/ SCREWS




STEP 3.
FLIP BIN OVER. SLIDE (2) SHORT SHELVES & (1) LONG SLELF INTO SLOTS AS SHOWN. ENSURE SHELF NOTCHES FACE UP.

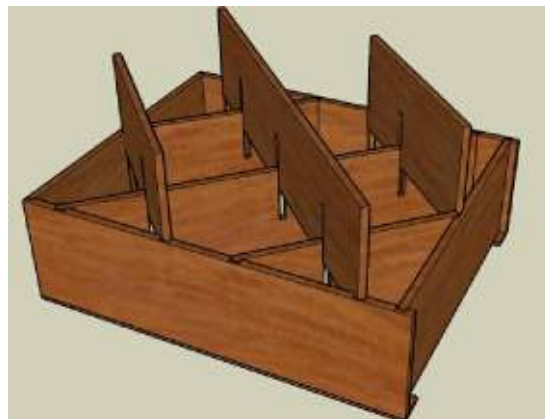


STEP 4.
SLIDE (2) SHORT SHELVES & (1) LONG SLELF INTO SLOTS AS SHOWN. ENSURE SHELF NOTCHES FACE DOWN.

8_5-250-3225-3975
7 COLUMN COMPOUND DIAMOND BIN
ASSEMBLY INSTRUCTIONS

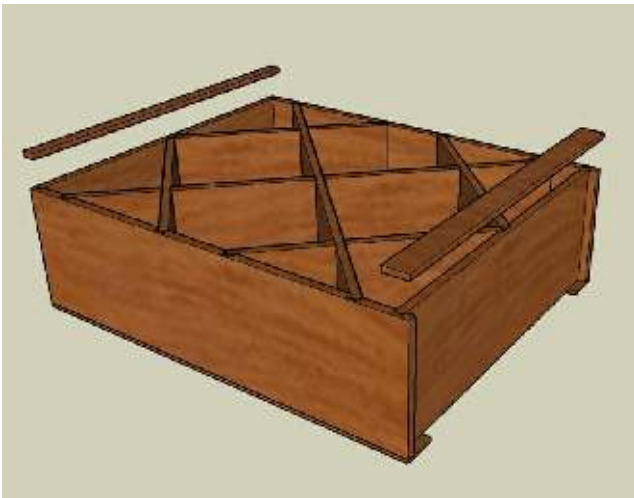

STEP 5.
ATTACH (1) 2 $\frac{1}{4}$ " x 32 $\frac{1}{4}$ " FACE TRIM TO
BOTTOM OF BIN. ATTACH (1) 1 $\frac{1}{4}$ " x 32 $\frac{1}{4}$ "
FACE TRIM TO TOP OF BIN w/ FINISH
NAILS.

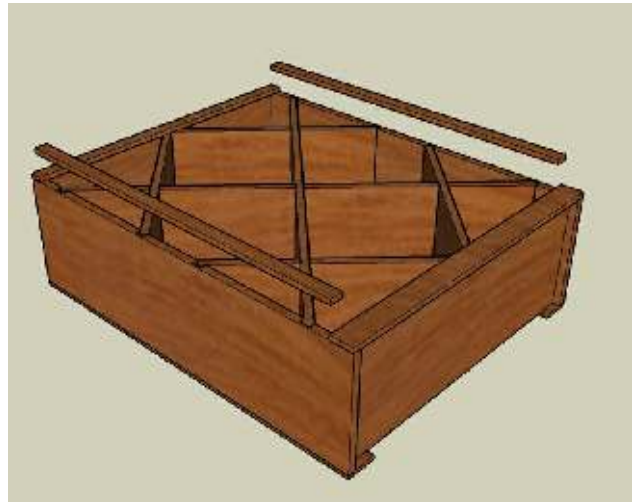

STEP 6.
ATTACH (2) 1 $\frac{1}{4}$ " x 36 $\frac{1}{4}$ " FACE TRIM TO
SIDES OF BIN w/ FINISH NAILS