## 8\_5-250-5475-3975 12 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS



(1)  $54\frac{3}{4}$ " x  $1\frac{1}{4}$ " Face Trim

(2) 36<sup>1</sup>/<sub>4</sub>" x 1<sup>1</sup>/<sub>4</sub>" Face Trim

(1)  $54\frac{3}{4}$ " x  $2\frac{1}{4}$ " Face Trim



## **PARTS LIST**




STEP 1.
ATTACH (2) SIDES TO THE TOP & BOTTOM w/ SCREWS. ENSURE SLOTS ON SIDES ALIGN.



STEP 2. ATTACH (1) LEFT & (1) RIGHT CLEAT w/ SCREWS


## 8\_5-250-5475-3975 12 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS

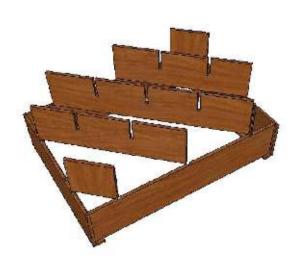

STEP 3.
FLIP BIN OVER. SLIDE (2) SHORT
SHELVES, (2) MEDIUM LENGTH SHELVES
& (1) LONG SLELF INTO SLOTS AS SHOWN.
ENSURE SHELF NOTCHES FACE UP AND
ALIGN.



STEP 5. ATTACH (1)  $2\frac{1}{4}$ " x  $54\frac{3}{4}$ " FACE TRIM TO BOTTOM OF BIN, (1)  $1\frac{1}{4}$ " X  $54\frac{3}{4}$ " FACE TRIM TO TOP OF BIN AND (2)  $1\frac{1}{4}$ " X  $36\frac{1}{4}$ " TO SIDES w/FINISH NAILS.

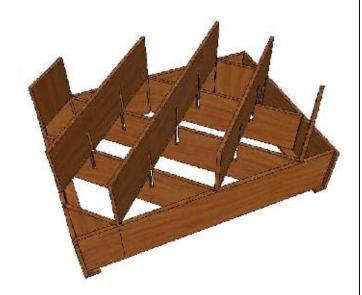

STEP 4.
SLIDE (2) SHORT SHELVES, (2) MEDIUM
LENGHT SHELVES & (1) LONG SLELF INTO
SLOTS AS SHOWN. ENSURE SHELF
NOTCHES FACE DOWN.