

ASSEMBLY INSTRUCTIONS Standard Curved Corner Racking

Thank you for purchasing this fine quality made in America product. When properly assembled and installed, your racking will complement your wine collection for many years to come. To ensure proper assembly please ascertain that all necessary parts have been included and follow the instructions closely. If you have any questions or problems please call us at 1-845-658-7181, Monday through Friday 9am to 5 pm EST.

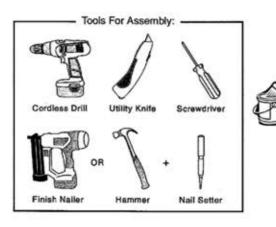

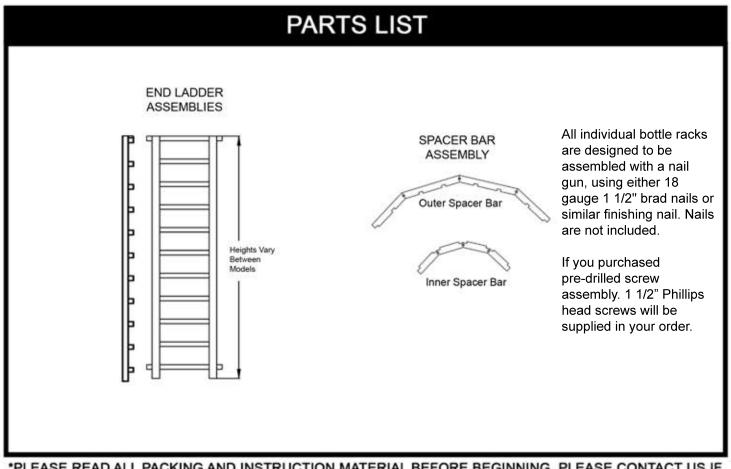

*Note: General instructions for Ciurved Corner Racks.



If you are planning to stain or finish your

assembly for best results.

racking we recommend you do so BEFORE

PLEASE READ ALL PACKING AND INSTRUCTION MATERIAL BEFORE BEGINNING. PLEASE CONTACT US IF YOU HAVE ANY QUESTIONS OR CONCERNS BEFORE BEGINNING ASSEMBLY.

PACKAGE CONTENTS				
SKU	PRODUCT NAME	END LADDERS	SPACER BARS	SCREVVS (if used)
8-3-070-2400-3975	Base Curved Corner Individual Rack	8	4	32
8_3-070-2400-3825-X	Upper Curved Corner Individual Rack	8	4	32
8-3-070-2400-0450	4 1/2" Curved Corner Modular Rack	8	4	32
8_3-070-2400-0825	Curved Corner 8 1/4" Modular Rack	8	4	32
8-3-070-2400-1200	12" Curved Corner Modular Rack	8	4	32
8_3-070-2400-1575	15 3/4" Tall Modular Curved Corner Individual Rack	8	4	32
8-3-070-2400-1950	19 1/2" Curved Corner Modular Rack	8	4	32
8-3-070-2400-2325	23 1/4" Curved Corner Modular Rack	8	4	32
8_3-070-2400-2700	27" Tall Modular Curved Corner Individual Rack	8	4	32
8-3-070-2400-3075	30 3/4" Curved Corner Modular Rack	8	4	32
8-3-070-2400-3450	34 1/2" Curved Corner Modular Rack	8	4	32
8-3-070-2400-3825	38 1/4" Tall Modular Curved Corner Individual Rack	8	4	32

*Note: Please verify that you have the correct number of parts before proceeding.

PLEASE FOLLOW WRITTEN INSTRUCTIONS CAREFULLY

1. Find an open, flat area in which to assemble your racking. Carefully remove all components from the box and check all parts to verify package contents.

2. Arrange the end ladders on the floor so that the bottle support pieces face one another. Attach inner and outer spacer bar to top and bottom.

*Note: The inner spacer bar is the smaller section with the finished wood edge and the outer is the larger with the edge-banded facing.

