

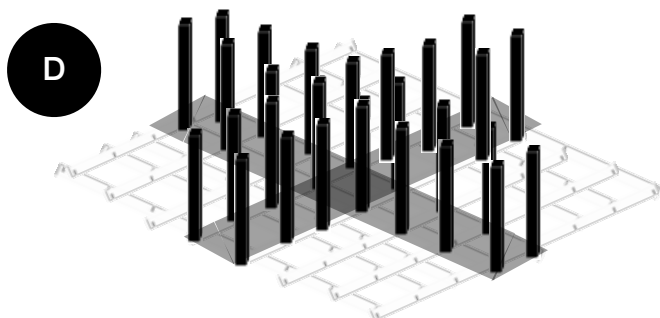


Wine Rack Assembly Instructions

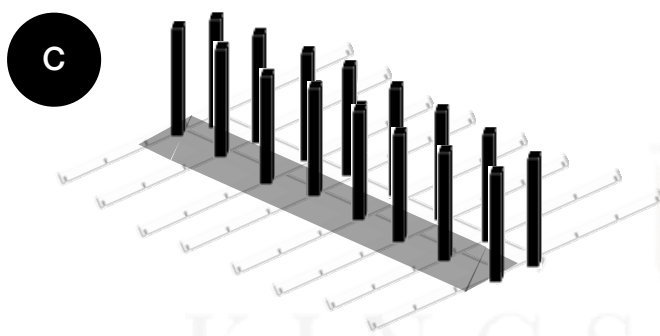

STEP 1 - BOTTOM FRAME


- Assemble the bottom metal frame on a flat surface.
 - Line up and hammer the timber slats into the metal frames using a rubber mallet. Make sure it's fully hammered in.
 - Start from the center.
- ([Instruction Video](#))

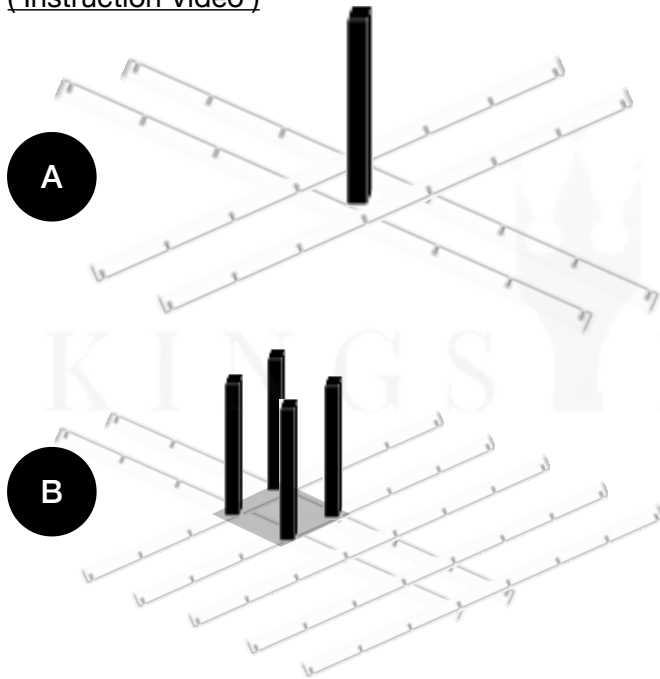

STEP 2 - TOP FRAME


- Insert one section of the metal frame **only halfway** down into the wood pieces.
([Instruction Video](#))

E

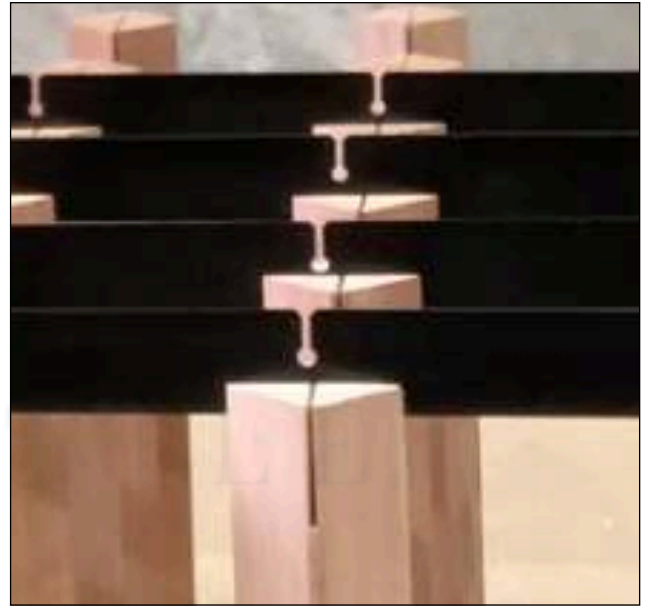

Insert the 2nd section of the metal frame into the 1st and use a rubber mallet to complete the installation into the wood pieces.

F

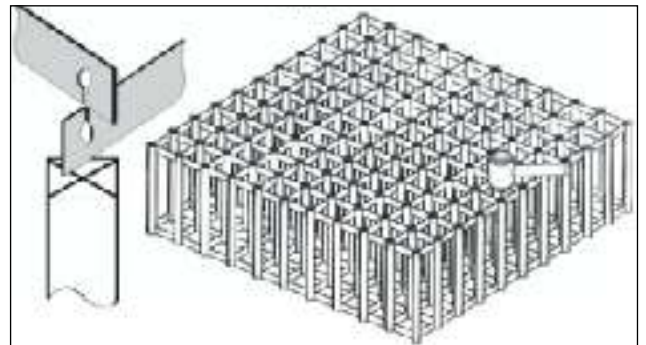

STEP 3 - NECK PROTECTOR

- Snap the bottle neck protectors onto the front side of the metal frame.

G



BOM of Classic Wine Racks-1

WxH	Timber Slat	Neck Protector	MP01	MP02	MP03	MP04	MP05	MP06	MP07	MP08	MP09	MP10	MP11
1x1	4	2	8										
1x2	6	3	6	4									
1x3	8	4	8		4								
1x4	10	5	10			4							
1x5	12	6	12				4						
1x6	14	7	14					4					
1x7	16	8	16						4				
1x8	18	9	18							4			
1x9	20	10	20								4		
1x10	22	11	22									4	
1x11	24	12	24										4
2x1	6	4	6	4									
2x2	9	6		12									
2x3	12	8		8	6								
2x4	15	10		10		6							
2x5	18	12		12			6						
2x6	21	14		14				6					
2x7	24	16		16					6				
2x8	27	18		18						6			
2x9	30	20		20							6		
2x10	33	22		22								6	
2x11	36	24		24									6
3x1	8	6	8		4								
3x2	12	9		8	6								
3x3	16	12			16								
3x4	20	15			10	8							
3x5	24	18			12		8						
3x6	28	21			14			8					
3x7	32	24			16				8				
3x8	36	27			18					8			
3x9	40	30			20						8		
3x10	44	33			22							8	
3x11	48	36			24								8
4x1	10	8	10			4							
4x2	15	12		10		6							
4x3	20	16			10	8							
4x4	25	20				20							
4x5	30	24				12	10						
4x6	35	28				14		10					
4x7	40	32				16			10				
4x8	45	36				18				10			
4x9	50	40				20					10		
4x10	55	44				22						10	
4x11	60	48				24							10
5x1	12	10	12				4						
5x2	18	15		12			6						
5x3	24	20			12		8						
5x4	30	25				12	10						
5x5	36	30					24						
5x6	42	35					14	12					
5x7	48	40					16		12				
5x8	54	45					18			12			
5x9	60	50					20				12		
5x10	66	55					22					12	
5x11	72	60					24						12
6x1	14	12	14					4					
6x2	21	18		14				6					
6x3	28	24			14			8					
6x4	35	30				14		10					
6x5	42	36					14	12					
6x6	49	42						28					
6x7	56	48						16	14				
6x8	63	54						18		14			
6x9	70	60						20			14		
6x10	77	66						22				14	
6x11	84	72						24					14

BOM of Classic Wine Racks-2

WxH	Timber Slat	Neck Protector	MP01	MP02	MP03	MP04	MP05	MP06	MP07	MP08	MP09	MP10	MP11
7x1	16	14	16						4				
7x2	24	21		16					6				
7x3	32	28			16				8				
7x4	40	35				16			10				
7x5	48	42					16		12				
7x6	56	49						16	14				
7x7	64	56							32				
7x8	72	63							18	16			
7x9	80	70							20		16		
7x10	88	77							22			16	
7x11	96	84							24				16
8x1	18	16	18							4			
8x2	27	24		18						6			
8x3	36	32			18					8			
8x4	45	40				18				10			
8x5	54	48					18			12			
8x6	63	56						18		14			
8x7	72	64							18	16			
8x8	81	72								36			
8x9	90	80								20	18		
8x10	99	88								22		18	
8x11	108	96								24			18
9x1	20	18	20								4		
9x2	30	27		20							6		
9x3	40	36			20						8		
9x4	50	45				20					10		
9x5	60	54					20				12		
9x6	70	63						20			14		
9x7	80	72							20		16		
9x8	90	81								20	18		
9x9	100	90									40		
9x10	110	99									22	20	
9x11	120	108									24		20
10x1	22	20	22									4	
10x2	33	30		22								6	
10x3	44	40			22							8	
10x4	55	50				22						10	
10x5	66	60					22					12	
10x6	77	70						22				14	
10x7	88	80							22			16	
10x8	99	90								22		18	
10x9	110	100									22	20	
10x10	121	110										44	
10x11	132	120										24	22
11x1	24	22	24										4
11x2	36	33		24									6
11x3	48	44			24								8
11x4	60	55				24							10
11x5	72	66					24						12
11x6	84	77						24					14
11x7	96	88							24				16
11x8	108	99								24			18
11x9	120	110									24		20
11x10	132	121										24	22
11x11	144	132											48

BOM of Sloped Wine Racks

[illegible]


Sloped Wine Rack Assembly Instructions

STEP 1

Assemble the bottom metal frame on a flat surface.


STEP 2

Line up and insert the wood rack pieces into the metal frame. Use a rubber mallet to install into the metal cross frame.
Start from **the corner (the longest metal piece)**

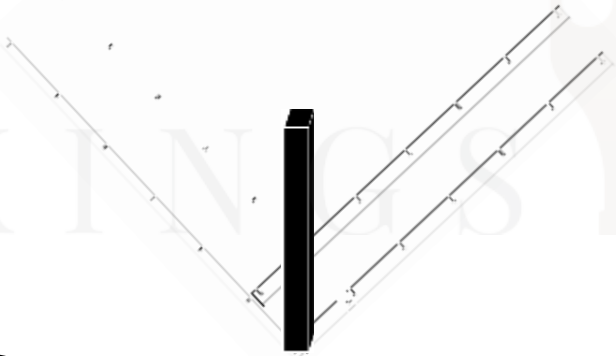


STEP 3

Insert one section of the metal frame **only half way** down into the wood pieces.

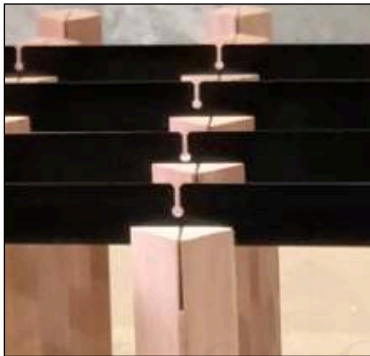

STEP 4

Insert the 2nd section of the metal frame into the 1st and using a rubber mallet complete the installation into the wood slats.

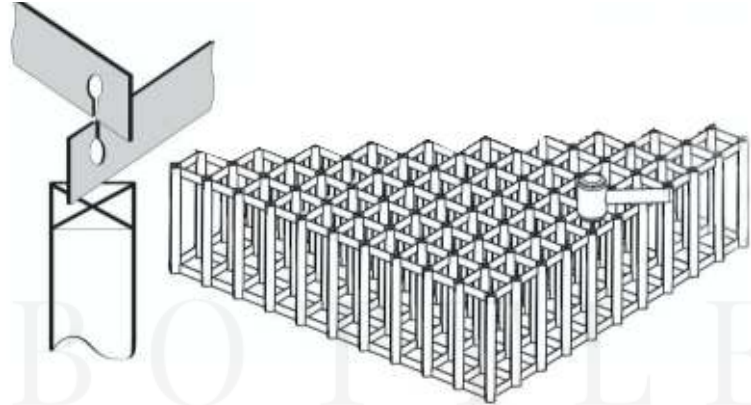

STEP 5



The bottle neck protector snap onto the front side of the metal frame.



BOM of Sloped Wine Racks

[illegible]

ASSEMBLY INSTRUCTIONS _ TYPE-V

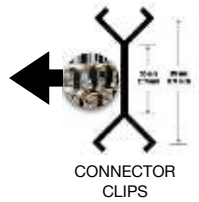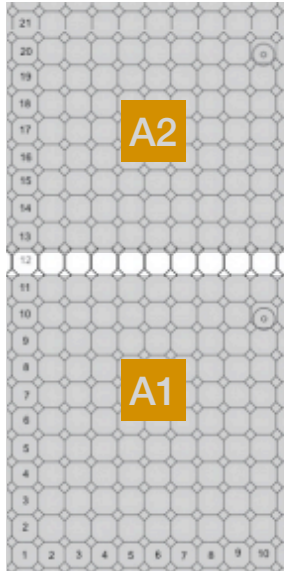


1

Build the wine racks A1, A2


2

CONNECT (STACK) 2 UNITS VERTICALLY

a. Attach the plastic PLASTIC CONNECTOR CLIPS to the wooden slats on the **BOTTOM ROW** of A2.

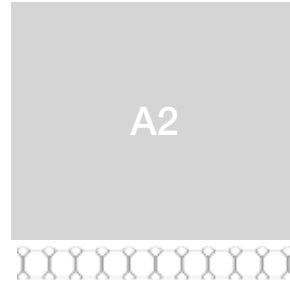

b. Connect A2 to A1, B2 to B1;

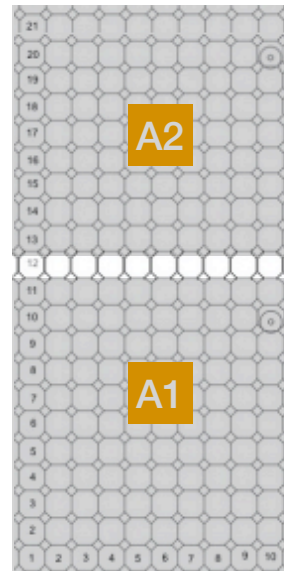

PRODUCT LINKS ON KINGSBOTTLE ONLINE STORES

USA STORE:

[Connector Clips](#)

[Connector Metal Pieces](#)

[Wall Bracket](#)

AUSTRALIA STORE:

[Connector Clips](#)

[Connector Metal Pieces](#)

[Wall Bracket](#)

ASSEMBLY INSTRUCTIONS _ TYPE-H



1

Build the wine racks A1, B1



2

CONNECT 2 UNITS HORIZONTALLY

a. Using the **PLASTIC CONNECTOR CLIPS** (red line below), connect A1 to B1, to **fix their positions**.

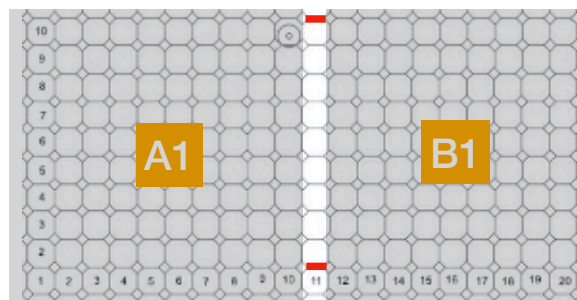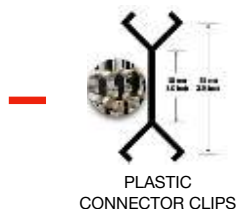

b. Connect A1 to B1, A2 to B2 by inserting the **METAL CONNECTOR PIECES** along the middle column where the **PLASTIC CONNECTOR CLIPS** were inserted in step 2a

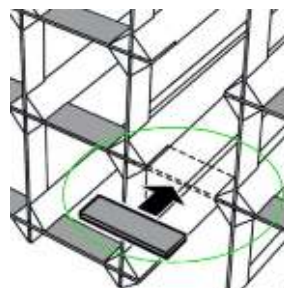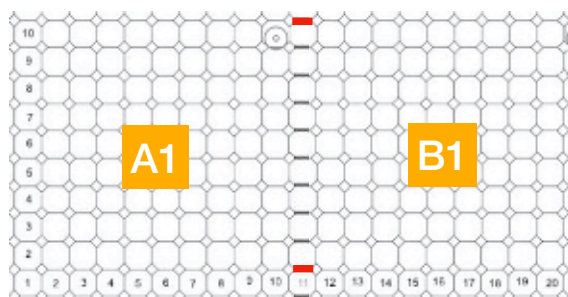

PRODUCT LINKS ON KINGSBOTTLE ONLINE STORES

USA STORE:

[Connector Clips](#)

[Connector Metal Pieces](#)

[Wall Bracket](#)

AUSTRALIA STORE:

[Connector Clips](#)

[Connector Metal Pieces](#)

[Wall Bracket](#)

ASSEMBLY INSTRUCTIONS

1

Build the wine racks A1, A2, B1, B2

2

CONNECT (STACK) 2 UNITS VERTICALLY


Attach the PLASTIC CONNECTOR CLIPS to the wooden slats on the **BOTTOM ROW** of A2 and B2.
Connect A2 to A1, B2 to B1;






3

CONNECT 2 UNITS HORIZONTALLY

a. Using the PLASTIC CONNECTOR CLIPS (red line below), connect A1 to B1, A2 to B2, to **fix their positions**.

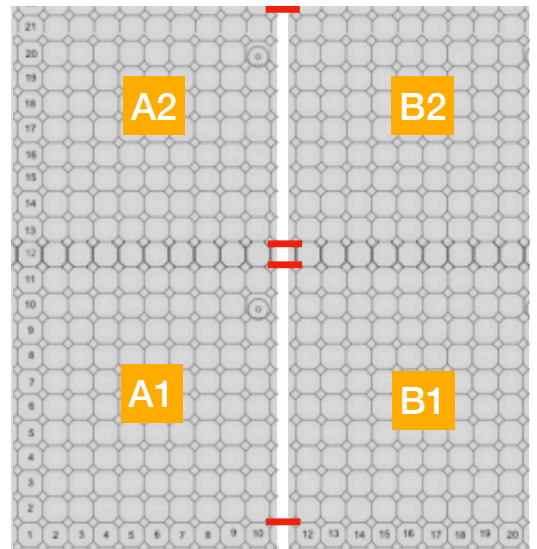

b. Connect A1 to B1, A2 to B2 by inserting the METAL CONNECTOR PIECES along the middle column where the PLASTIC CONNECTOR CLIPS were inserted in step 3a

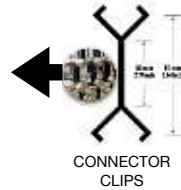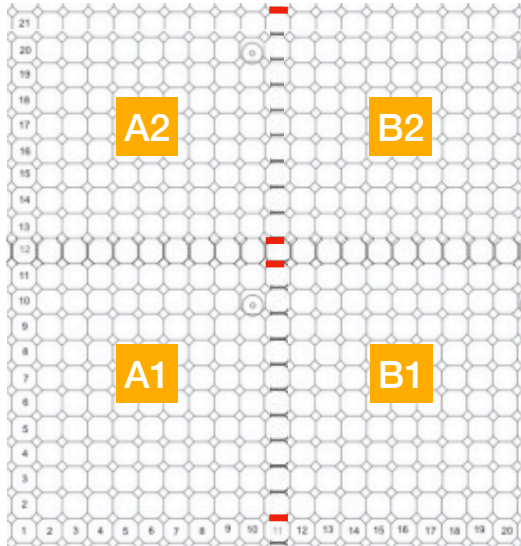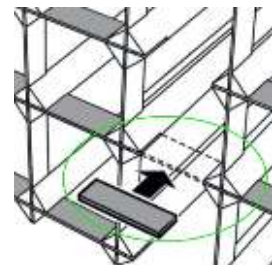

METAL CONNECTOR PIECE

PRODUCT LINKS ON KINGSBOTTLE ONLINE STORES

USA STORE:

[Connector Clips](#)

[Connector Metal Pieces](#)

[Wall Bracket](#)

AUSTRALIA STORE:

[Connector Clips](#)

[Connector Metal Pieces](#)

[Wall Bracket](#)

INSTALLATION INSTRUCTIONS



Wall Bracket

W i t h F i x i n g s


Length: 9.26" (235mm)

The wall brackets are used to firmly connect the wine rack to the adjacent wall. It is recommended to have 4 brackets per square meter (10 sqft), which is around 100 holes/bottles, or 4 brackets per unit (one at each corner).



Move the wine racks to the desired location. Mark the position where the wall brackets will be installed.

Drill the holes in the wall, then insert only the plastic portion.

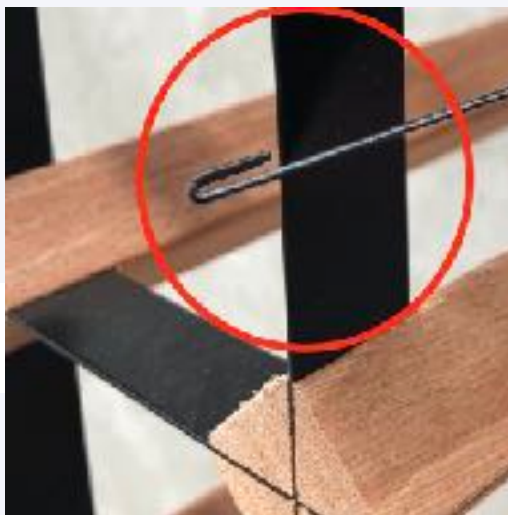

Hook the wall bracket to the front frame of the wine racks



Screw in.