Sloped Wine Rack Assembly Instructions

1

STEP 1
Assemble the bottom metal frame on a flat surface.

2

STEP 2
Line up and insert the wood rack pieces into the metal frame. Use a rubber mallet to install into the metal cross frame.
Start from **the corner (the longest metal piece)**

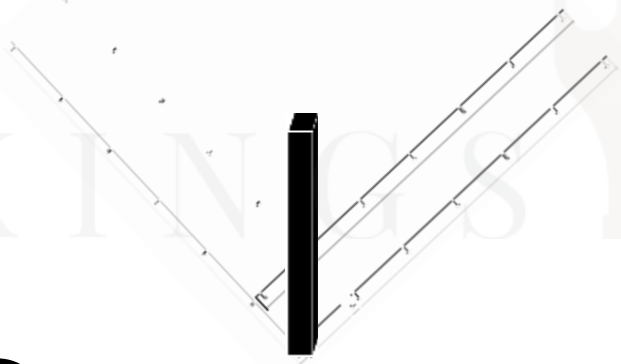

3

STEP 3
Insert one section of the metal frame **only half way** down into the wood pieces.

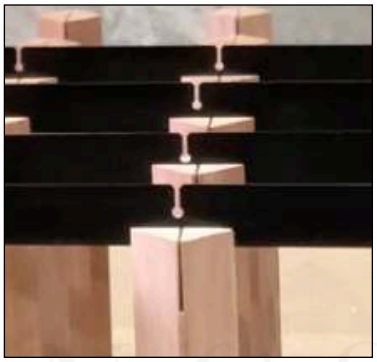

4

STEP 4
Insert the 2nd section of the metal frame into the 1st and using a rubber mallet complete the installation into the wood slats.

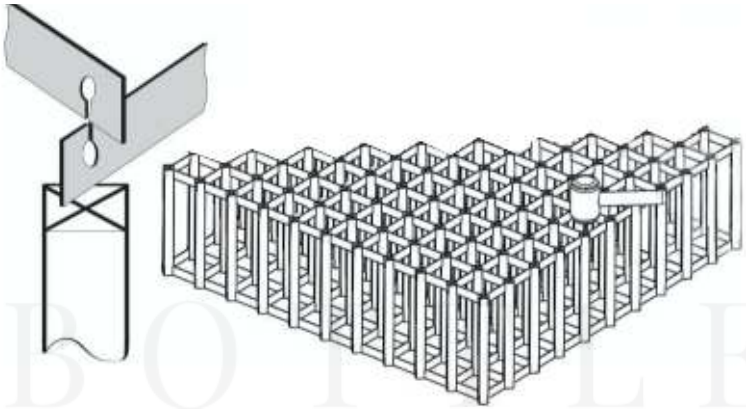

5

STEP 5
The bottle neck protector snap onto the front side of the metal frame.

BOM of Sloped Wine Racks

SKU	Timber Slat	Neck Protector	MP01	MP02	MP03	MP04	MP05	MP06	MP07	MP08	MP09	MP10	MP11
WRTS04	19	14	4	4	4	8							
WRTS05	26	20	4	4	4	4	8						
WRTS06	34	27	4	4	4	4	4	8					
WRTS07	43	35	4	4	4	4	4	4	8				
WRTS08	53	44	4	4	4	4	4	4	4	8			
WRTS09	64	54	4	4	4	4	4	4	4	4	8		
WRTS10	76	65	4	4	4	4	4	4	4	4	4	8	
WRTS11	89	77	4	4	4	4	4	4	4	4	4	4	8